


# FRIGIDAIRE®

## All about the

# Use & Care

## of your Convection Toaster Oven

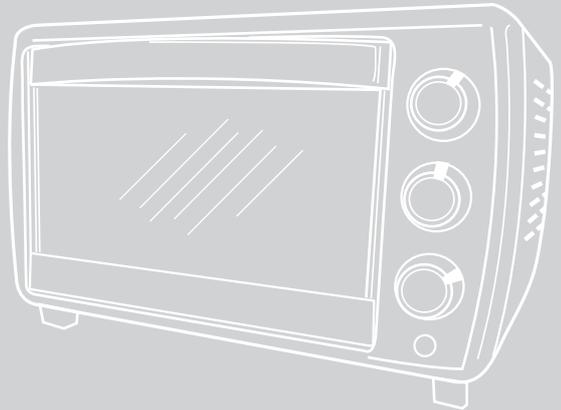

### CONTENTS

Important safeguards .....	2-3	Cleaning your convection toaster oven .....	8
Parts and features .....	4	Replacement parts .....	8
Prior to using your convection toaster oven	5	Warranty information .....	9
Cooking with your convection toaster oven	6-7	Spanish user's manual .....	10-18
Cooking chart .....	7	French user's manual .....	19-27

Register via the internet at: [www.frigidaire.com/productregistration](http://www.frigidaire.com/productregistration)

USA & Canada 1-888-845-7330

0900523629 - UM-r1 (March, 2015)

## IMPORTANT SAFEGUARDS

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not place cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug. If the appliance malfunctions, or has been damaged in any manner, return the appliance to the nearest authorized service center for inspection, repair, or adjustment.
7. Do not use outdoors.
8. Do not let cord touch hot surfaces or hang over edge of table or counter where it can be pulled on by children or tripped over unintentionally.
9. Do not place on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
10. Do not use this appliance for other than intended use.
11. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.
12. The use of accessory attachments not recommended by the appliance manufacturer may cause serious injuries.
13. When operating the oven keep at least six inches of space on all sides of the oven to allow for adequate air circulation.
14. To disconnect, turn the timer knob to '0' to turn the oven off; then remove the cord by grasping and pulling out the plug. Never unplug by pulling on the cord.
15. Extreme caution must be used when moving an appliance containing hot oil, or other hot liquids.
16. Do not cover crumb tray or any part of the oven with metal foil. This may cause overheating of the oven.
17. Use extreme caution when removing tray or disposing of hot grease or other hot liquids.
18. Oversized foods or metal utensils must not be inserted into the Convection Toaster Oven, as they may create a fire or a risk of electric shock.
19. While in operation, a fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like. Do not store, or lay any item on the oven during operation.
20. Extreme caution should be exercised when using containers constructed of anything other than metal or glass.
21. Do not place any of the following materials in the oven: cardboard, plastic, paper, or other flammable materials.
22. Do not store any materials other than manufacturer's recommended accessories in this oven when not

## IMPORTANT SAFEGUARDS

- in use.
23. Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.
  24. This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can break, but the pieces will not have sharp edges. Avoid scratching door surface or nicking edges. If the door has a scratch or nick, contact our toll-free consumer relations line before using the oven.
  25. To turn off the Convection Toaster Oven, turn the timer knob to '0.'
  26. **WARNING:** This product contains chemicals known to the State of California to cause cancer, birth defects or reproductive harm. **WASH HANDS AFTER HANDLING.**

## SAVE THESE INSTRUCTIONS

### Consumer Safety Information

**THIS UNIT IS FOR HOUSEHOLD USE ONLY**

#### **Polarized Plug**

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug and reinsert. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.



#### **CAUTION**

**Short cord instructions:** Your Convection Toaster Oven appliance is fitted with a short power supply cord as a safety precaution to prevent personal injury or property damage resulting from pulling, tripping or becoming entangled with a longer cord. Do not allow children to use or be near this appliance without close adult supervision. If an extension cord is used, (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and (2) the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

#### **WARNING**

**Electrical power:** If the electric circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electric circuit from other appliances.


## PARTS AND FEATURES

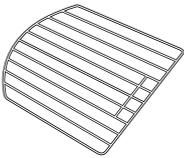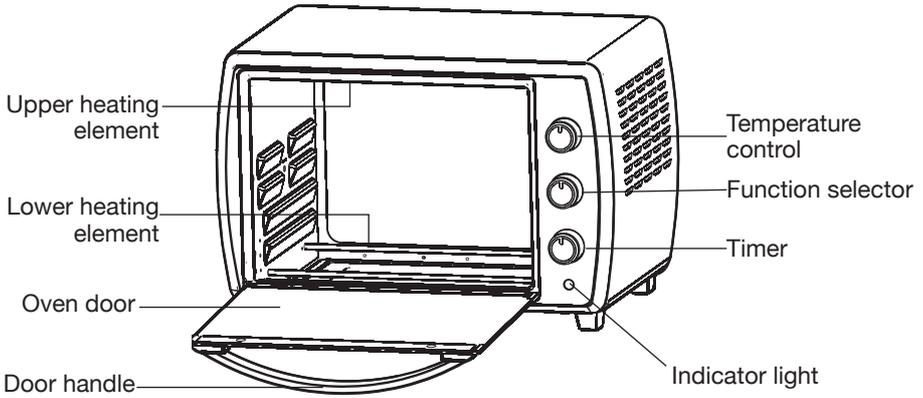


**Cooking rack** – Use for dry foods such as toast and baked potatoes. Also use rack to support casseroles or other cookware.



**Baking pan** – Use for broiling and baking meat, poultry, fish and other foods.

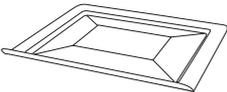

**Crumb tray** – Leave in oven for most cooking to catch drips and spills. Slide the crumb tray into position underneath the bottom heating elements.

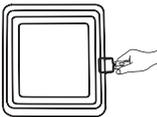

**Tray grabber** – Use to slide crumb tray, rack or baking pan out of hot oven.

## PRODUCT SPECIFICATIONS


Model number	FRCN06K5NS
Power supply	120 volts AC only; 60 Hz
Rated wattage	1440 watts
Dimensions	Width: 19.38" / 492mm Depth: 14.49" / 368mm Height: 11.81" / 300mm

# PRIOR TO USING YOUR CONVECTION TOASTER OVEN

## Unpack and inspect

- Carefully unpack the contents from the box and check to make sure all accessories are accounted for, and that the toaster oven and accessories appear to be free of any physical damage. If you discover any damage, or missing parts, please contact our customer service department at 1-888-845-7330 prior to plugging the unit in.
- Remove any printed material or tape from the oven. Open the oven door and look inside to ensure that there are no packaging materials or foreign objects inside the oven.
- Remove cooking rack, baking pan, crumb tray and tray grabber. Wash in hot, soapy water and dry thoroughly before placing back in the oven.

## Getting ready to use

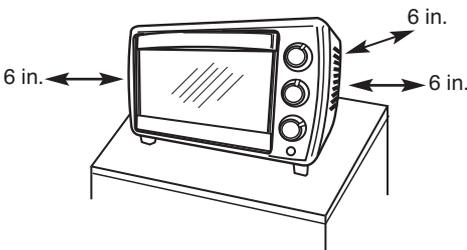

1. Position the oven on a level surface away from windows, with adequate clearance for air to circulate on all sides. Never allow curtains, towels, clothing or other flammable materials to come in contact with the oven while it is in use.
2. Plug the oven into a grounded electrical outlet. The oven should be the only appliance operating on that circuit.
3. Heat the oven before cooking for the first time. Position crumb tray, baking pan and cooking rack inside oven. Set the temperature at 425°F and set function selector to bake/toast. Turn the oven on by

turning the timer clockwise to 15 minutes.

4. After this cycle is complete, the convection toaster oven is now ready to use.

**NOTE: During this break-in process, the oven may produce light smoke and/or a burning smell. This is normal.**

## Each time you cook


- Leave crumb tray in place but remove cooking rack or baking pan if they are not being used for the dish you are preparing.
- If tray grabber is stored inside the oven, remove it before turning oven on.
- Be sure there are no items on top of oven before turning oven on.

### CAUTION

**Do not cover crumb tray or any part of the oven with metal foil. This can cause the oven to heat improperly.**

# COOKING WITH YOUR CONVECTION TOASTER OVEN


## Cooking rack positions

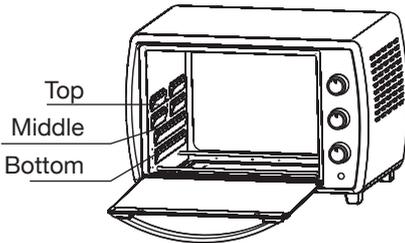


Three rack-position slots along the sides of the oven interior allow you to position food at the correct height. Always make sure food is at least 1 inch away from the heating elements.

For most cooking, position rack so that food will be centered in the oven. Always monitor food during the cooking time. Move food to a lower rack if top is browning too much, or to higher rack if bottom is too brown.


## Setting the oven controls

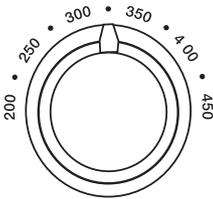

**Temperature control** – Rotate knob to set the desired temperature. See chart on page 7 for suggested temperatures.

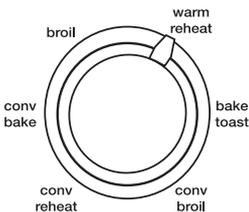

**Function selector** – Turn knob clockwise to desired type of cooking. Three settings use convection in addition to the electric heating elements. With convection cooking, a fan continually circulates air around the food for faster and more even cooking. Most recipes recommend reducing the temperature by 25° F when cooking with convection.

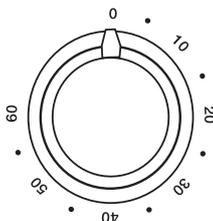

**Timer** – Turn the oven on by turning timer clockwise to the desired cooking time. When setting less than 5 minutes, turn past 6 minutes and then back to desired time. The oven will turn off automatically at the end of the selected cooking time and a bell will ring. To turn oven off manually, turn timer counter-clockwise to '0.'

**NOTE:** If the inside of the oven is dirty, cooking may take slightly longer than usual.

# COOKING WITH YOUR CONVECTION TOASTER OVEN

## Baking

Center food on the cooking rack and adjust rack height so food is centered in the oven. Be sure to account for foods that rise when cooked by placing them lower in the oven.

Both the top and bottom heating elements are activated during this function. If the recipe requires a preheated oven, allow 3 to 5 minutes before adding food.

## Broiling

Broiling typically cooks food from the top down and promotes browning only on top because only the top heating element is used. The closer food is placed to the top of the oven, the more quickly it will brown.

If food is browning too much or too quickly, lower the rack and reduce the temperature. The convection toaster oven does not have an open-door

feature, so the door must be closed when broiling.

**NOTE: Food to be broiled should always be at least 1 inch (2.5 cm) away from the top heating element. For foods such as fish or chicken or when less browning is desired, place the rack in a lower position.**

## Toasting

Toast up to six slices of bread at once. Regardless of the number of slices, bread should always be positioned directly on the cooking rack and as close to the center of the rack as possible. Both top and bottom heating elements are activated in the 'toast' function. Adjust the cooking rack height as needed for the type and thickness of bread. Toast bagels and English muffins with cut side up.

**NOTE: it is normal for condensation to form on the glass oven door when toasting moist or fresh breads.**

## Cooking chart

Food	Cooking temp.	Cooking time	Internal temp.*
Hamburger, 2-3 patties	375°-400° F	5-8 min.	160° F
Poultry, half chicken	350° F	30-35 min.	165° F
Fresh pork or beef	325°-350° F	20 min/lb.	150° F
Ham, ½-in. thick slice	375° F	8-10 min.	140° F
Seafood	375° F	8-10 min.	145° F
Egg dishes	325° F	per recipe	160° F
Casseroles	350° F	per recipe	165° F



\*Use a food thermometer to ensure that meat, poultry and other cooked foods reach a safe internal temperature. For more information see [www.foodsafety.gov](http://www.foodsafety.gov)

## CLEANING YOUR CONVECTION TOASTER OVEN

- Prior to cleaning, turn the oven off and unplug it.
- Allow ample time for all surfaces of the oven to cool completely.
- For daily cleaning, wipe the outside surface with a clean, damp cloth. To further enhance the finish of the stainless steel exterior, Frigidaire recommends Ecosential Stainless Steel Cleaner, by Smart Choice.™ You can order on line at: <http://frigidaire.stores.yahoo.net>, or by calling 1-800-599-7579.
- The cooking rack, baking pan, and crumb tray are dishwasher-safe, but must be washed in the top rack of the dishwasher. To clean by hand, wash in hot soapy water, rinse, and dry thoroughly before placing these items back in the oven.
- Wash the oven interior only with a cloth or other soft-surface material. Do not use abrasive or metallic cleaners on the interior, as damage to the surface may occur.
- Do not use metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electrical shock.
- Do not immerse the convection toaster oven in water or any other liquid.

**NOTE: Clean your convection toaster oven regularly to minimize the risk of fire hazard and to enhance cooking performance.**

## REPLACEMENT PARTS

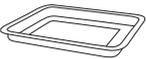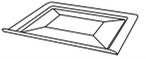Frigidaire Accessories / Accesorios de Frigidaire / Accessoires de Frigidaire		Part No. N° De Parte / N° De Pièce
	Cooking rack <i>Parrilla de cocción / Grille de cuisson</i>	69035
	Baking pan <i>Bandeja para hornear / Plat de cuisson</i>	69036
	Crumb tray <i>Bandeja receptora de migajas / Ramasse-miettes</i>	69037
	Tray grabber <i>Sujetador de bandejas / Poignée de plateau</i>	69038
	Replacement rubber feet (4-pack) <i>Patas de goma de repuesto (paquete de 4) / Pied en caoutchouc de remplacement (emballage de 4)</i>	69039

To order replacement parts in the U.S.A and Mexico, visit us online at [www.frigidaire.com/professional](http://www.frigidaire.com/professional)  
To order replacement parts in Canada, visit us online at [www.frigidaire.ca](http://www.frigidaire.ca). Or call us at 1-888-845-7330  
**Hours:** Call Monday-Friday, 9 am-8:30 pm EST; Saturday and Sunday, 11am-7.30 pm EST.  
(Please call the same number for answers to problems or questions.)

**For pricing, see our website [www.frigidaire.com/professional](http://www.frigidaire.com/professional) or call 1-888-845-7330**

# SMALL DOMESTIC APPLIANCE WARRANTY

Your appliance is covered by a **one year limited warranty**. For one year from your original date of purchase, Electrolux will repair or replace the appliance or parts, at Electrolux's option, that prove to be defective in materials or workmanship when the appliance is installed, used, and maintained in accordance with the provided instructions. Labor and all costs associated with returning the appliance or parts to us and our returning the appliance or parts to you are excluded under this warranty. As a matter of warranty policy, Electrolux will not refund the consumer's purchase price. If a product or part under warranty is no longer available, Electrolux will replace with a comparable product of equal or greater value.

## **Exclusions: This warranty does not cover the following:**

- 1 Products with original serial numbers that have been removed, altered or cannot be readily determined.
  - 2 Products that have been transferred from the original owner to another party or removed outside the USA or Canada.
  - 3 Rust on the interior or exterior of the unit.
  - 4 Products purchased "as-is".
  - 5 Food loss due to product failure.
  - 6 Products used in a commercial setting or anything but single family household use.
  - 7 Labor or service visits under any circumstance.
  - 8 Glass parts or containers, filters, non-stick surfaces.
  - 9 Ordinary wear and tear.
- 10 Damages caused by improper use, installation, or service; use of parts other than genuine Electrolux parts; negligence; abuse; misuse; inadequate or excessive power supply; accidents; fires; or acts of God.

Keep your receipt or some other appropriate payment record to establish the warranty period. Should warranty service be required, you must show proof of purchase.

## **If you need service:**

To obtain warranty service in the USA or Canada, call 1-888-845-7330. Please have the model number, serial number, and date of purchase information available.

## **DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES:**

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE, AT ELECTROLUX'S SOLE DISCRETION, PRODUCT OR PART REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

This warranty only applies to products purchased in the USA and CANADA. In the USA, your appliance is warranted by Electrolux Home Care Products, Inc. In Canada, your appliance is warranted by Electrolux Home Care Products Canada Inc. Electrolux authorizes no person to change or add to any obligations under this warranty. Product features or specifications as described or illustrated are subject to change without notice.

## **USA**

**1-888-845-7330**

Electrolux Home Care Products, Inc.  
10200 David Taylor Drive  
Charlotte, NC 28262

## **CANADA**

**1-888-845-7330**

Electrolux Home Care Products Canada Inc.  
5855 Terry Fox Way  
Mississauga, ON, Canada L5V 3E4