

FRIGIDAIRE®

All about the

Use & Care

of your 4 Slice Toaster

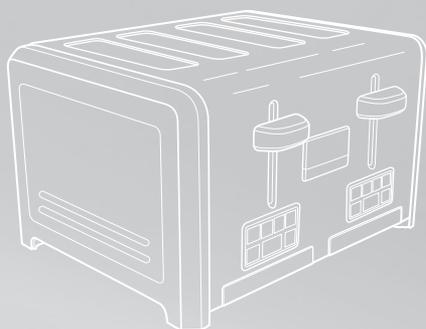


TABLE OF CONTENTS

Important Safeguards	2	Maintaining and Caring for Your Toaster.....	12
Toaster Safety Instructions.....	4	Tips	13
Parts and Features.....	5	Troubleshooting.....	13
Preparing Toaster for First Use.....	8	Warranty.....	14
Using the Toaster.....	9		
Replacement Parts.....	11		

Register via the internet at:

www.frigidaire.com/productregistration

USA and Canada 1-888-845-7330

900253334-UM/R3 (March 2013)

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1 Read all instructions.
- 2 Do not touch hot surfaces. Use handles or knobs.
- 3 To protect against electric shock, do not place cord, plugs, or appliance in water or other liquid.
- 4 Close supervision is necessary when any appliance is used by or near children.
- 5 Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- 6 Do not operate any appliance with a damaged cord or plug. If the appliance malfunctions, or has been damaged in any manner, return the appliance to the nearest authorized service center for inspection, repair, or adjustment.
- 7 Do not use outdoors.
- 8 Do not let cord touch hot surfaces or hang over edge of table or counter where it can be pulled on by children or tripped over unintentionally.
- 9 Do not place on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
- 10 Do not use this appliance for other than intended use.
- 11 The use of accessory attachments not recommended by the appliance manufacturer may cause serious injuries.
- 12 To disconnect, press the Cancel button, and then remove the cord by grasping and pulling out the plug from wall outlet. Never unplug by pulling on the cord.
- 13 Extreme caution must be used when moving an appliance containing hot oil, or other hot liquids.
- 14 Oversized foods, metal foil packages or utensils must not be inserted into the Toaster, as they may create a fire or a risk of electric shock.
- 15 While in operation, a fire may occur if the Toaster is covered or touching flammable material, including curtains, draperies, walls, and the like. Do not store, or lay any item on the Toaster during operation.
- 16 Do not attempt to dislodge food when Toaster is plugged in.
- 17 Service should only be performed by an authorized service provider.

SAVE THESE INSTRUCTIONS

Consumer Safety Information

THIS UNIT IS FOR HOUSEHOLD USE ONLY.

Polarized Plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug and reinsert. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

CAUTION


Short Cord Instructions: Your Toaster appliance is fitted with a short power supply cord as a safety precaution to prevent personal injury or property damage resulting from pulling, tripping or becoming entangled in or tripping over a longer cord. Do not allow children to use or be near this appliance without close adult supervision. Extension cords are available and may be used if care is exercised in their use. If an extension cord is used, (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, (2) the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

FRIGIDAIRE TOASTER SAFETY

Product Specifications

❑ Model Number	FPTT04D7MS
❑ Rated Voltage	120V/60HZ
❑ Rated Wattage	1400W
❑ Rated Capacity	4 slices bread

PARTS AND FEATURES

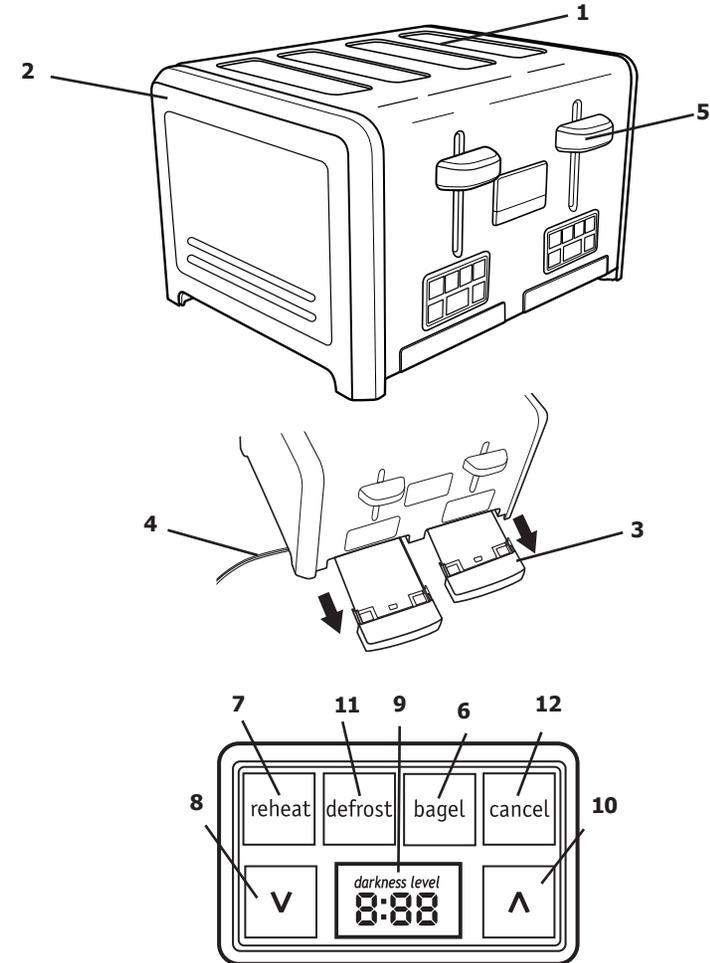

- | | |
|--|---|
| 1 Extra Wide Slots with Self-centering Cage | 7 Reheat Button |
| 2 Stainless Steel Housing | 8 Lighter Toast Button |
| 3 Removable Crumb Trays | 9 Pro-Select® LCD Display with Countdown Indicator |
| 4 Power Cord | 10 Darker Toast Button |
| 5 Effortless™ Lift-Out Lever | 11 Defrost |
| 6 Bagel Button | 12 Cancel |

TOASTER FEATURES

Countdown Indicator

The Pro-Select® LCD display will change from the darkness level to the countdown indicator once the Effortless™ Lift-Out Lever is pushed down, and the toasting cycle begins.

Extra Wide Slots With Self-Centering Cage

The convenient large opening of the slots will accommodate thicker slices of bread and bagels. But with the help of the self-centering cage, even the thinnest slices are kept upright and in the center to ensure consistent toasting on both sides.

Durable Stainless Steel Exterior

The durable all-stainless steel upper exterior is easy to clean and always looks great.

Removable Crumb Trays

The Crumb Trays are easily accessible and removable. The drawer-like trays are located in the front of the Toaster. The trays themselves are constructed of aluminum, and are dishwasher safe (wash in top rack only).

Under-Side Cord Wrap

Expose only enough cord to reach your electrical outlet. The remaining cord stays neatly wound under the Toaster and out of sight.

Effortless™ Lift-Out Lever

The Effortless™ Lift-Out Lever makes even the smallest bread products more accessible by lifting the bread or bagel higher in the slots after toasting. For even higher reach, push the Lift Lever upward from its home-up position.

Bagel Button

The Bagel feature turns off the outer heating elements, toasting only the sliced face of the bagel.

Reheat Button

This feature allows you to place finished toast that has cooled, back in the Toaster to reheat.

Defrost Button


This feature will defrost frozen toasting items, and then automatically start the toasting cycle.

Cancel Button

At any time during the toasting process, pressing the cancel button will immediately turn off the heating elements and lift the food.

PREPARING TOASTER FOR FIRST USE

- 1 Carefully unpack the contents from the box and check to make sure all accessories are accounted for, and that the Toaster and accessories appear to be free of any physical damage. If you discover any damage, or missing parts, please contact our customer service department at 1-888-845-7330 prior to plugging the unit in.
- 2 Remove any printed material or tape from the Toaster, and then inspect the interior by looking down into the slots to make sure there are no packaging materials, or foreign objects inside the Toaster. Do not probe the inside of the Toaster with any metal object.
- 3 Turn the Toaster over and unwrap as much of the cord as necessary to adequately reach the electrical outlet, and then plug the unit in.
- 4 On the control panel, press the up arrow repeatedly until the Pro-Select® LCD display is set to the highest setting of "7".
- 5 Without placing any bread products in the Toaster, push the Effortless™ Lift-Out Lever down until it locks into place. The Toaster will heat up to toasting temperatures and run for approximately 4 minutes. Repeat this process again for a second time. You may detect some light smoke or odor. This is normal and why we recommend running the first cycle or 2 without bread products.
- 6 Your new Toaster is now ready for normal use.

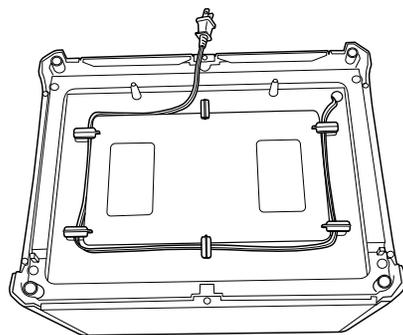

USING THE TOASTER

Toasting Bread

If at any time you want to stop the toasting process, simply press the Cancel button and the unit will turn off and lift the product.

- 1 If the Toaster is not plugged in, plug it in to a grounded wall outlet now.
- 2 Place one to four slices of fresh bread into the Toaster.
- 3 Using the Up or Down arrows, set the degree of darkness to the desired setting; number 7 being the darkest.
- 4 Press the Effortless™ Lift-Out Lever all the way down until it locks into place. The toasting cycle will begin immediately and display the countdown indicator.
- 5 Once the cycle is complete, the lever will lift the toast up for removal. If the bread products are smaller in size and hard to reach safely, gently lift the lever up to raise the toast higher in the slots.
- 6 The toast and the surface surrounding the slots will be hot. To avoid burns, use extreme caution when removing the toast from the Toaster.

Toasting Bagels (or English Muffins)

By turning off the outer heating elements, the Bagel function will toast the sliced side of the bagel, while gently warming the soft, unsliced side.

If at any time you want to stop the toasting process, simply press the Cancel button and the unit will turn off and lift the product.

- 1 Place one to four sliced bagel halves into the Toaster. Insert the bagel (or English muffin) halves so that the sliced side faces the center of each set of slots.
- 2 Using the Up or Down arrows, set the degree of darkness to the desired setting; number 7 being the darkest. English muffins typically require a slightly higher setting than bagels.
- 3 Press the Effortless™ Lift-Out Lever all the way down until it locks into place. The toasting cycle will begin immediately and display the countdown indicator.
- 4 Once the cycle is complete, the lever will lift the bagel or muffin up for removal. If the bread products are smaller in size and hard to reach safely, gently lift the lever up to raise the toasted food up higher in the slots.

- The bagel and the surface surrounding the slots will be hot. To avoid burns, use extreme caution when removing the bagel from the Toaster.

Reheating

Quickly reheat previously toasted food. Do not reheat food with butter or other toppings. Reheat only dry food products.

If at any time you want to stop the toasting process, simply press the Cancel button and the unit will turn off and lift the product.

- Place the previously toasted food into the Toaster.
- Press the Reheat button. No level setting number will be present, as the warming temperature and heating time are preset.
- Once the food has been adequately heated, the unit will raise the food.
- The food and the surface surrounding the slots will be hot. To avoid burns, use extreme caution when removing the toast from the Toaster.

Defrost

Defrost and toast frozen bread in one easy step. Frozen waffles, pancakes, and french toast should be warmed using the Defrost function.

If at any time you want to stop the Defrost/Toasting process, simply press the Cancel button and the unit will turn off and lift the product.

- Insert the frozen bread into the Toaster and press the Defrost button.
- Using the Up or Down arrows, set the degree of darkness to the desired setting; number 7 being the darkest.
- Press the Effortless™ Lift-Out Lever all the way down until it locks into place. The Defrost cycle will begin immediately. Once the Defrost cycle is complete, the toasting process will automatically begin. At the end of the Toast cycle, the lever will lift the food up for removal.
- The toast and the surface surrounding the slots will be hot. To avoid burns, use extreme caution when removing the toast from the Toaster.

REPLACEMENT PARTS

Frigidaire Accessories / Accesorios de Frigidaire / Accessoires de Frigidaire		Part No. N° De Parte / N° De Pièce
	Crumb Tray Charola Para Migajas Ramasse-miettes	16225
	Replacement Rubber Feet (4-Pack) Pies de Goma de Reemplazo (Conjunto de 4) Pieds en Caoutchouc de Remplacement (Paquet de 4)	16181-4

To order replacement parts in the U.S.A and Mexico, visit us online at www.frigidaire.com/professional

To order replacement parts in Canada, visit us online at www.frigidaire.ca

Or call us at 1-888-845-7330


Hours

Call Monday-Friday, 9 am-8:30 pm EST; Saturday and Sunday, 11am-7.30 pm EST. (Please call the same number for answers to problems or questions.)

For pricing, see our website www.frigidaire.com/professional or call 1-888-845-7330

MAINTAINING AND CARING FOR YOUR TOASTER


- 1 Unplug the Toaster and allow ample time for all components to cool.
- 2 From the front of the Toaster, slide the Crumb Trays out and empty into a waste container. The Crumb Trays should be emptied and cleaned after each use. The Crumb Trays are dishwasher safe and should be washed in the top rack of the dishwasher.

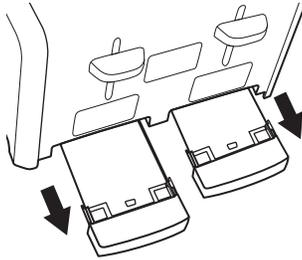

To clean the exterior of the Toaster, after the unit cools, simply wipe with a soft, damp cloth. To brighten and clean the stainless steel exterior, Frigidaire recommends Ecosential Stainless Steel Cleaner by Smart Choice™. Purchase online at <http://frigidaire.stores.yahoo.net/> or call Toll-free number: 1-800-599-7569

Do not use abrasive cleaners or scrubbers and do not immerse the Toaster in water.

- 3 After cleaning, return the Crumb Trays to the Toaster. Be sure the Crumb Trays seat properly by pressing firmly into place. Do not operate the Toaster without the Crumb Trays properly installed.

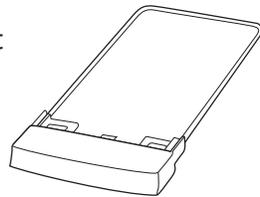

TIPS AND TROUBLESHOOTING

Tips

- Drier breads typically require a lower darkness level setting than normal.
- Very fresh and whole wheat breads typically require a higher darkness level setting than normal.
- Use caution with toaster pastries as the filling can become very hot before the surface is toasted. Never toast or warm these unattended.
- Never force foods into the toasting slots.
- After each use, unplug the Toaster from the electrical outlet.

Troubleshooting

If your Toaster should fail to operate, check to make sure it is plugged into a properly grounded electrical outlet. If it is, unplug the unit for one minute and then plug back in. If the unit fails to operate, unplug the Toaster and check the fuse or circuit breaker to the electrical outlet.

If this does not solve the problem, immediately discontinue the use of the Toaster. See the Frigidaire warranty section of this guide to obtain service information.

WARRANTY

Your appliance is covered by a **one year limited warranty**. For one year from your original date of purchase, Electrolux will repair or replace the appliance or parts, at Electrolux's option, that prove to be defective in materials or workmanship when the appliance is installed, used, and maintained in accordance with the provided instructions. Labor and all costs associated with returning the appliance or parts to us and our returning the appliance or parts to you are excluded under this warranty. As a matter of warranty policy, Electrolux will not refund the consumer's purchase price. If a product or part under warranty is no longer available, Electrolux will replace with a comparable product of equal or greater value.

Exclusions: This warranty does not cover the following:

- 1 Products with original serial numbers that have been removed, altered or cannot be readily determined.
- 2 Products that have been transferred from the original owner to another party or removed outside the USA or Canada.
- 3 Rust on the interior or exterior of the unit.
- 4 Products purchased "as-is".
- 5 Food loss due to product failure.
- 6 Products used in a commercial setting or anything but single family household use.
- 7 Labor or service visits under any circumstance.
- 8 Glass parts or containers, filters, non-stick surfaces.
- 9 Ordinary wear and tear.
- 10 Damages caused by improper use, installation, or service; use of parts other than genuine Electrolux parts; negligence; abuse; misuse; inadequate or excessive power supply; accidents; fires; or acts of God.

Keep your receipt or some other appropriate payment record to establish the warranty period. Should warranty service be required, you must show proof of purchase.

If You Need Service:

To obtain warranty service in the USA or Canada, call 1-888-845-7330. Please have the model number, serial number, and date of purchase information available.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES:

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE, AT ELECTROLUX'S SOLE DISCRETION, PRODUCT OR PART REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

This warranty only applies to products purchased in the USA and CANADA. In the USA, your appliance is warranted by Electrolux Home Care Products, Inc. In Canada, your appliance is warranted by Electrolux Home Care Products Canada Inc. Electrolux authorizes no person to change or add to any obligations under this warranty. Product features or specifications as described or illustrated are subject to change without notice.

USA

1-888-845-7330

Electrolux Home Care Products, Inc.
10200 David Taylor Drive
Charlotte, NC 28262

CANADA

1-888-845-7330

Electrolux Home Care Products Canada Inc.
5855 Terry Fox Way
Mississauga, ON, Canada L5V 3E4