 


# Use & Care Manual

Visit the Frigidaire Web Site at: <http://www.frigidaire.com>

Counter-Top  
**Microwave Oven**  
with Convenience Pad

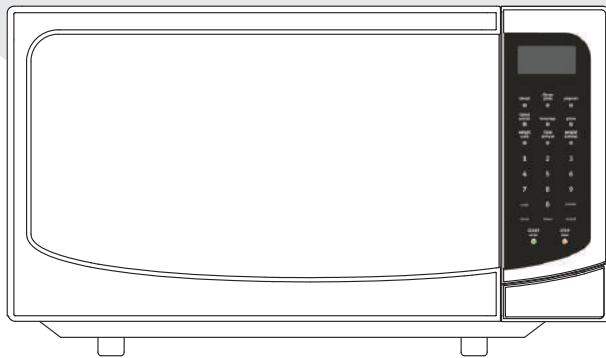

Welcome ..... 2



Important Safety Instructions ..... 3-7



Features and Specifications ..... 8



Before Operating ..... 9



Manual Operation ..... 10-11



Care & Cleaning ..... 12



## Before You Call

Solutions to Common Problems ..... 13



Warranty ..... Back Page

 


Questions or for Service Call:

**1-866-312-2117**



## Welcome & Congratulations

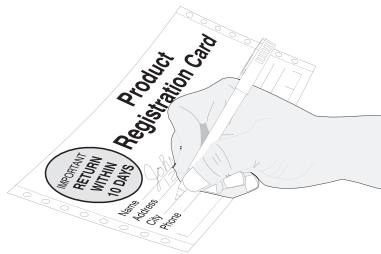

### Product Registration

**Be sure to register your product.** The self-addressed **PRODUCT REGISTRATION CARD** should be filled in completely, signed and returned to Electrolux Home Products.

This Use & Care Manual contains general operating instructions for your appliance and feature information for several models. Your microwave **may not** have all the described features. The graphics shown are representative. The graphics on your microwave may not look exactly like those shown.

Congratulations on your purchase of a new microwave! At **Electrolux Home Products**, we are very proud of our product and are completely committed to providing you with the best service possible. Your satisfaction is our number one priority.

We know you'll enjoy your new microwave and **Thank You** for choosing our product. We hope you consider us for future purchases.

### PLEASE CAREFULLY READ AND SAVE THESE INSTRUCTIONS

This Use & Care Manual provides specific operating instructions for your model. Use your microwave only as instructed in this manual. These instructions are not meant to cover every possible condition and situation that may occur. Common sense and caution must be practiced when installing, operating and maintaining any appliance.

Be sure to record your model and serial number. The serial plate is located on the back of the microwave oven.

**Please record your model and serial number and date of purchase in the spaces provided below for future reference in case your microwave should ever require servicing:**

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

## IMPORTANT SAFETY INSTRUCTIONS



### READ ALL THE INSTRUCTIONS BEFORE USING

### PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- A) **Do not Attempt** to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- B) **Do not Place** any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- C) **Do not Operate** the oven if it is damaged. It is particularly important that the oven door close properly and that there is not damage to the:
  - a) door (bent)
  - b) hinges and latches (broken or loosened),
  - c) door seals and sealing surfaces.
- D) **The oven should not** be adjusted or repaired by anyone except properly qualified service personnel.

## Important Safety Instructions



# What You Need to Know About Safety Instructions

Warning and Important Safety Instructions appearing in the Use & Care Guide are not meant to cover all possible conditions and situations that may occur. Common sense, caution, and care must be exercised when installing, maintaining or operating a microwave.

Always contact your dealer, distributor, service agent or manufacturer about problems or conditions you do not understand.

# Recognize Safety Symbols, Words, Labels

## DANGER

**DANGER** – Immediate hazards which **WILL** result in severe personal injury or death.

## WARNING

**WARNING** – Hazards or unsafe practices which **COULD** result in severe personal injury or death.

## CAUTION

**CAUTION** – Hazards or unsafe practices which **COULD** result in minor personal injury.

## CAUTION

To avoid personal injury or property damage, observe the following:

1. **Do not** deep fat fry in oven. Fat could overheat and be hazardous to handle.
2. **Do not** cook or reheat eggs in shell or with an unbroken yolk using microwave energy. Pressure may build up and erupt. Pierce yolk with fork or knife before cooking.
3. Pierce skin of potatoes, tomatoes, and similar foods before cooking with microwave energy. When skin is pierced, steam escapes evenly.
4. **Do not** operate oven without load or food in oven cavity.
5. Use only popcorn in packages designed and labeled for microwave use. Popping time varies depending on oven wattage. **Do not** continue to heat after popping has stopped. Popcorn will scorch or burn. **Do not** leave oven unattended.
6. **Do not** use regular cooking thermometers in oven. Most cooking thermometers contain mercury and may cause an electrical arc, malfunction, or damage to oven.
7. **Do not** use metal utensils in oven.
8. **Never** use paper, plastic, or other combustible materials that are not intended for cooking.
9. When cooking with paper, plastic, or other combustible materials, follow manufacturer's recommendations on product use.
10. **Do not** use paper towels which contain nylon or other synthetic fibers. Heated synthetics could melt and cause paper to ignite.
11. **Do not** heat sealed containers or plastic bags in oven. Food or liquid could expand quickly and cause container or bag to break. Pierce or open container or bag before cooking.
12. To avoid pacemaker malfunction, consult physician or pacemaker manufacturer about effects of microwave energy on pacemaker.

# SAVE THESE INSTRUCTIONS

 


## Important Safety Instructions

### **⚠ WARNING**

To avoid risk of electrical shock or death, this oven must be grounded and plug must not be altered.

## Grounding Instructions

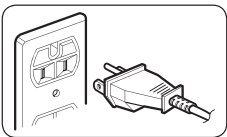

**Oven MUST be grounded.** Grounding reduces risk of electric shock by providing an escape wire for the electric current if an electrical short occurs. This oven is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded. See Installation Instructions.

Consult a qualified electrician or servicer if grounding instructions are not completely understood, or if doubt exists as to whether the oven is properly grounded.

**Do not use an extension cord.** If the product power cord is too short, have a qualified electrician install a three-slot receptacle. This oven should be plugged into a separate 60 hertz circuit with the electrical rating as shown in specifications table. When the oven is on a circuit with other equipment, an increase in cooking times may be required and fuses can be blown.

Microwave operates on standard household current, 110-120V.

## Federal Communications Commission Radio Frequency Interference Statement (U.S.A. Only)

This equipment generates and uses ISM frequency energy and if not installed and used properly, that is in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with limits for ISM Equipment pursuant to part 18 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following:

- Reorient the receiving antenna of the radio or television.
- Relocate the microwave oven with respect to the receiver.
- Move the microwave oven away from the receiver.
- Plug the microwave oven into a different outlet so that the microwave oven and the receiver are on different branch circuits.

**The manufacturer** is not responsible for any radio or television interference caused by **unauthorized modification** to this microwave oven. It is the responsibility of the user to correct such interference.

# SAVE THESE INSTRUCTIONS

## Important Safety Instructions



# Precautions to Avoid Possible Exposure to Excessive Microwave Energy

### Adhere to the following precautions:

- **DO NOT** attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlock switches.
- **DO NOT** place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- **DO NOT** use any cleaning materials on the oven door gasket. Doing so could cause damage.
- **DO NOT** operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to:
  1. door (bent),
  2. hinges and latches (broken or loosened),
  3. door seals and sealing surfaces.
- Oven should not be adjusted or repaired by anyone except properly qualified service personnel.

### **WARNING**

Liquids such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling due to surface tension of the liquid. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. **THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.** To reduce the risk of injury to persons:

1. **Do not** overheat the liquid.
2. Stir the liquid both before and halfway through heating it.
3. **Do not** use straight-sided containers with narrow necks.
4. After heating, allow the container to stand in the microwave oven for a short time before removing the container.
5. Use extreme care when inserting a spoon or other utensil into the container.

## SAVE THESE INSTRUCTIONS



## Important Safety Instructions

### WARNING

When using electrical appliances, basic safety precautions should be followed to reduce the risk of burns, electric shocks, fire or injury to persons or exposure to excessive microwave energy.

- **READ ALL** instructions before using oven.
- **READ AND FOLLOW** the specific “PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY” on page 5.
- Install or locate this oven **ONLY** in accordance with the installation instructions in this Use & Care Manual.
- Some products such as whole eggs and sealed containers - for example, closed jars - are able to explode and **SHOULD NOT** be **HEATED** in this oven.
- Use this oven **ONLY** for its intended use as described in this Use & Care Manual. Do not use corrosive chemicals or vapors in this oven. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
- As with any appliance, **CLOSE SUPERVISION** is necessary when used by **CHILDREN** or **INFIRM PERSONS**.
- Review the door cleaning instructions in the Care & Cleaning section.
- **DO NOT** heat baby bottles in oven.
- Baby food jars shall be open when heated and contents stirred or shaken before consumption, in order to avoid burns.
- **DO NOT** use this oven for commercial purposes. It is made for household use only.
- **DO NOT** operate this oven if it has a damaged cord or power plug, if it is not working properly, or if it has been damaged or dropped.
- This oven, including power cord, must be serviced **ONLY** by qualified service personnel. Special tools are required to service oven. Contact nearest authorized service facility for examination, repair, or adjustment.
- **DO NOT** cover or block any vents or openings on the oven.
- **DO NOT** store this oven outdoors. **DO NOT** use this appliance near water - for example, near a kitchen sink, in a wet basement, near a swimming pool or similar locations.
- **DO NOT** immerse cord or plug in water.
- Keep cord **AWAY** from **HEATED** surfaces.
- **DO NOT** let cord hang over edge of table or counter.
- Review the door cleaning instructions in the Care & Cleaning section.

### CAUTION

To avoid the risk of fire in the oven cavity: injury to persons or exposure to excessive microwave energy.

 
- **DO NOT** overcook food. Carefully attend oven when paper, plastic or other combustible materials are placed inside the oven to facilitate cooking.
- Remove wire twist-ties from paper or plastic bags before placing bag in oven.
- If materials inside the oven ignite, keep oven door **CLOSED**, turn oven off and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
- **DO NOT** use this oven cavity for storage. **DO NOT** leave paper products, cooking utensils or food in the cavity when not in use.

# SAVE THESE INSTRUCTIONS

## Features & Specifications




### Microwave features

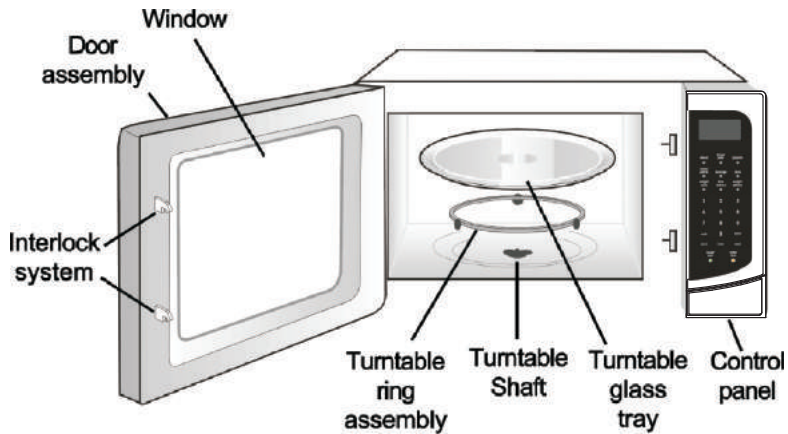

### Oven specifications

Power Supply	120VAC, 60 Hz
Input Power	1,450W
Cooking Power	1,000W
Frequency	2,450 MHz
Outer Dimensions (WxHxD)	21.8" x 12.3" x 17.9"
Cavity Volume	1.4 cubic ft.
Net Weight	39.6 lbs.
 
### Control panel

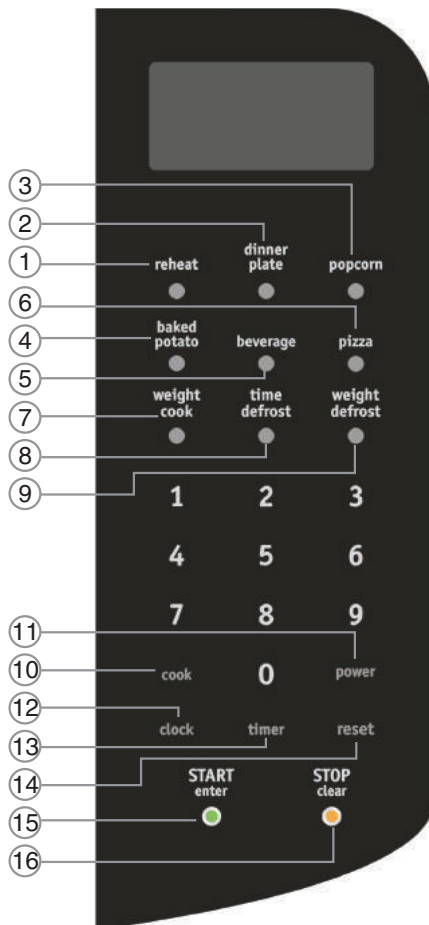

- (1) reheat
- (2) dinner plate
- (3) popcorn
- (4) baked potato
- (5) beverage
- (6) pizza
- (7) weight cook
- (8) time defrost
- (9) weight defrost
- (10) cook
- (11) power
- (12) clock
- (13) timer
- (14) reset
- (15) **Start**/enter
- (16) Stop/clear



## Before Operating

### Learn more about your microwave oven

#### **⚠ CAUTION**

- To avoid risk of personal injury or property damage, do not operate the microwave oven empty.
- To avoid risk of personal injury or property damage, do not use stoneware, aluminum foil, metal utensils, or metal trimmed utensils in the microwave oven.

### Setting the clock

Example: setting clock display for 9:00:

1. Touch clock pad once. clock
2. Enter time using number pads. 0900
3. Touch clock pad again. clock

### Microwave utensil guide

Use	Do not use
<ul style="list-style-type: none"> <li>• <b>Oven proof glass (specifically treated for high intensity heat):</b> Utility dishes, loaf dishes, pie plates, cake plates, liquid measuring cups, casseroles and bowls without metallic trim.</li> <li>• <b>China:</b> Bowls, cups, serving plates and platters without metallic trim.</li> <li>• <b>Plastic:</b> Plastic wrap (as a cover) - lay the plastic wrap loosely over the dish and press it to the sides. Vent plastic wrap by turning back one edge slightly to allow excess steam to escape. The dish should be deep enough so that the plastic wrap will not touch the food. Use plastic dishes, cups, semi-rigid freezer containers and plastic bags for short cooking times. Use these with care because the plastic may soften from the heat of the food.</li> <li>• <b>Paper:</b> Paper towels, waxed paper, paper napkins and paper plates with no metallic trim or design. Look for the manufacturer's label for any special instructions for use in the microwave oven.</li> </ul>	<ul style="list-style-type: none"> <li>• <b>Metal utensils:</b> Metal shields the food from microwave energy and produces uneven cooking. Also, avoid metal skewers, thermometers or foil trays. Metal utensils can cause arcing, which can damage your microwave oven.</li> <li>• <b>Metal decoration:</b> Bowls, cups, serving plates and platters without metallic trim.</li> <li>• <b>Aluminum foil:</b> Avoid large sheets of aluminum foil because they hinder cooking and may cause harmful arcing. Use small pieces of foil to shield poultry legs and wings. Keep ALL aluminum foil at least 1 inch from the side walls of the oven cavity and door of the microwave.</li> <li>• <b>Wood:</b> Wooden bowls and boards will dry out and may split or crack when you use them in the microwave oven. Baskets made of wood will react in the same way.</li> <li>• <b>Tightly covered utensils:</b> Be sure to leave openings for steam to escape from covered cookware. Pierce plastic pouches of vegetables or other food items before cooking. Tightly closed pouches may explode.</li> <li>• <b>Brown paper:</b> Avoid using brown paper bags. They absorb heat and can burn.</li> <li>• <b>Flawed or chipped cooking utensils:</b> Any utensil that is cracked, flawed or chipped may break in the oven.</li> <li>• <b>Metal twist ties:</b> Remove metal twist ties from plastic or paper bags. They become hot and could cause a fire.</li> </ul>

# Manual Operation



## SETTING THE CLOCK

1. Press **CLOCK** pad. The oven will display “**Enter**”, “**CLOCK**”, “**TIME**”, and “.” will be flashing.
2. Use the number pads to enter the correct time. Press at least three numbers to set the clock (one for hour and two for minutes).
3. Press **CLOCK** pad again.

### NOTE:

- This is a 12 hour clock. When the oven is first plugged in or when power resumes after a power interruption, the display will show “**ENTER CLOCK TIME**”. If you prefer to not have the clock displayed, press “**RESET**”.
- You can check the clock time while cooking is in progress by pressing the “**CLOCK**” pad.

## SETTING THE TIMER

1. Press “**TIMER**” pad. The oven will display “**Enter**”, “**TIME**”, and “.” will be flashing.
2. Enter the amount of time by pressing the the time in the numeric key pad.  
Example: for 25 minutes and 5 seconds  
Enter “2”, “5”, “0” and “5”
3. Press “**START/enter**” pad.

### NOTE:

- Time countdown can be seen in display before clock or cooking time is returned to display.
- Press “**TIMER**” and “**RESET**” to cancel operation during timing process.

## SETTING A COOKING PROGRAM

### A. One-stage Cooking

1. Use the number pads to set a cooking time. You can set a cooking time from one second to 99 minutes and 99 seconds.
2. If you want to set a power level other than 100% power, press “**POWER**”, use the number pads to enter the power level. You can set the power level from 10% to 90%.
3. Press “**START/enter**”

Use single digits to set a cooking power level:

Number pad	Cooking power
1, 0	100%

9	90%
8	80%
7	70%
6	60%
5	50%
4	40%
3	30%
2	20%
1	10%
0	0%

### B. Two-stage Cooking

Some recipes require different stages of cooking at different temperatures.

#### 1. SET STAGE 1:

Follow steps 1 and 2 in “One-stage Cooking”. **DO NOT PRESS “START/ Enter”**

#### 2. SET STAGE 2:

Press “**COOK**” and enter cooking time and (lower) power level. (Most 2-stage recipes use lower power for second stage.)

#### 3. Press “**START/enter**”

### NOTE:

- After total time has elapsed, signals sound and **END** appears in display. Touch **RESET** or open oven door to clear **END** before starting another cooking function.

## TIME DEFROST

1. Press “**TIME DEFROST**” pad. The oven will display “**ENTER**”, “**DEF**”, “**TIME**”.
2. Enter desired defrosting time (up to 99 min. 99 sec.) in the numeric pad.
3. Press “**START/enter**” pad.

### NOTE:

- After time has elapsed, signals sound, and “**END**” appears in display. Press “**RESET**” pad, or open door to clear the “**END**” before starting another cooking function.
- After setting “**TIME DEFROST**”, oven can be programmed to switch to one or two stages cooking.
- For “**TIME DEFROST**” and one stage cooking, follow above steps. Before pressing “**START/enter**”, press “**COOK**”, enter time and power level and press “**START/enter**”
- For “**TIME DEFROST**” and two stage cooking, follow steps above. Before pressing “**START/enter**”, press “**COOK**”, enter two-stage cooking programs.

# Manual Operation



## WEIGHT COOK

1. Touch WEIGHT COOK pad.
2. Enter the one digit code by touching the correct number pad (1-3).
3. Use the number pads to enter weight.
4. Touch START/enter pad.

### Cook By Weight Code Description

CODE	TYPE	MAX WEIGHT
1	Beef	5 lb. 16 oz.
2	Mutton	5 lb. 16 oz.
3	Pork	5 lb. 4 oz.

Note:

- Meat must be frozen and at refrigerated temperature.
- Weight must be in pounds and ounces.
- Ounce weights less than 10 must be preceded by a 0. If label gives weight in pounds only, change the fraction of a pound to ounces using the following chart.

### Converting Fractions of a Pound to Ounces:

Fractions of a pound	Ounces
Less than .03	0
.03 to .09	1
.10 to .15	2
.16 to .21	3
.22 to .27	4
.28 to .34	5
.35 to .40	6
.41 to .46	7
.47 to .53	8
.54 to .59	9
.60 to .65	10
.66 to .71	11
.72 to .78	12
.79 to .84	13
.85 to .90	14
.91 to .97	15
above .97	go to next even

- During cooking the system will pause and sound beeps to remind user to turn food over, and then press START/enter to resume the defrosting.
- After total cooking time, signals sound and END appears in display. Touch RESET or open oven door to clear END before starting another cooking function.
- Let meat stand few minutes before carving.

## WEIGHT DEFROST

1. Touch WEIGHT Defrost pad.
2. Use the number pads to enter weight.
3. Touch START/enter pad.

NOTE:

- Weight must be in pounds and ounces. Ounce weights less than 10 must be preceded by a 0. If label gives weight in pounds only, change the fraction of a pound to ounces using the chart given above. Maximum weight is 5 lb. 16 oz.
- During defrosting program, the system will pause and sound beeps to remind user to turn food over, and then press START / enter to resume the defrosting.
- After total defrosting time, signals sound and END appears in display. Touch RESET or open oven door to clear END before starting another cooking function.

## CHILD LOCK

The safety lock prevents unsupervised operation by children.

To activate, press and hold RESET pad for 3 seconds. LOCK will appear on the display window and no pads can be activated.

To deactivate, press and hold RESET pad for 3 seconds. LOCK will disappear and all pads will be valid.

# Manual Operation



## BAKED POTATOES

### For 4 to 6 oz. each share of potatoes:

1. Press "BAKED POTATO" pad once.
2. Enter number of potatoes by touching number pads from 1 to 4.
3. Press "START/enter" pad.

Number Pads	Number of Potatoes	Display
1	1	3:00
2	2	4:30
3	3	6:00
4	4	7:30

### For the 8 to 10 oz. each share of potatoes:

1. Press "BAKED POTATO" pad twice.
2. Enter number of potatoes by pressing number from 1 to 4 in the numeric key pad.
3. Press "START/enter" pad.

Number Pads	Number of Potatoes	Display
1	1	3:40
2	2	6:40
3	3	9:40
4	4	12:40

## PIZZA

### Reheating a slice of pizza:

1. Press "PIZZA" pad once.
2. Press "START/enter" pad.

### Heating a whole pizza:

1. Press "PIZZA" pad twice.
2. Press "START/enter" pad.

## BEVERAGE

### For 5 to 7 oz. each cup of beverage:

1. Press "BEVERAGE" pad once.
2. Enter number of cups by pressing the number 1 to 4 in the numeric key pad.
3. Press "START/enter" pad.

Number Pads	Number of Potatoes	Display
1	1	1:10
2	2	1:50
3	3	2:30
4	4	3:10

### For the 9 to 11 oz. each cup of beverage:

1. Press "BEVERAGE" pad twice.
2. Enter number of mugs by pressing number 1 to 4 in the numeric key pads.
3. Press "START/enter" pad.

Number Pads	Number of Potatoes	Display
1	1	1:40
2	2	2:50
3	3	4:00
4	4	5:10

## DINNER PLATE

### For one or two small of (7-9 oz. each) frozen dinners:

1. Press "DINNER PLATE" pad once.
2. Press "1 entree" or "2 entrees", in the numeric key pad : "1" or "2"
3. Press "START/enter" pad.

Number Pads	Number of Entrees	Display
1	1	5:10
2	2	7:30

### For one or two large of (10-12 oz. each) frozen dinner:

1. Press "FROZEN DINNER" pad twice.
2. Press "1 entree" or "2 entrees", in the numeric key pad : "1" or "2":
3. Press "START/enter" pad.

Number Pads	Number of Entrees	Display
1	1	6:00
2	2	11:00

## REHEAT

For a plate of cooled food:

1. Press "REHEAT"
2. Press "START/enter" pad.

## POPCORN

1. Press "POPCORN"
2. Press "START/enter" pad.

**NOTE:** To reset popcorn time press "POPCORN" twice "Enter Time" appears in the display. Enter the time using the number key pads. Press "START/enter". This new cooking time will remain when you press "POPCORN"



## Care & Cleaning

### CHILD LOCK

**To lock:** Press and hold “Reset” for 3 seconds or until “LOCK” is display on the screen.

**To unlock:** Press and hold “Reset” for 3 seconds or until “LOCK” disappears from the display”

### Cleaning suggestions

For best performance and for safety reasons, keep the oven clean inside and outside. Take special care to keep the inner door panel and oven front frame free of food and grease build-up.

**Never use rough scouring powder or pads** on the microwave. Wipe the microwave oven inside and out with a soft cloth and and warm (not hot) mild detergent solution. Then rinse and wipe completely dry.

Wipe spatters immediately with a wet paper towel, especially after cooking greasy foods like chicken or bacon.

Clean your microwave oven weekly or more often, if needed.

#### Follow these instructions to clean and care for your microwave oven:

- Keep the inside (cavity) of the oven clean. Food particles and spilled liquids can stick to the oven walls, causing the oven to work less efficiently.
- Wipe up spills immediately. Use a damp, clean cloth and mild soap. **DO NOT** use harsh detergents or abrasive cleaners.
- To help loosen baked-on food particles or liquids, heat 2 cups of water (add the juice of 1 lemon if you desire to keep the oven fresh smelling) in a 4 cup measuring glass at High power for 5 minutes or until boiling. Let stand in oven cavity for 1 or 2 minutes.
- Remove the glass turntable tray from the oven when cleaning the oven cavity or tray. To prevent the glass turntable from breaking, handle with care and do not put it in water immediately after cooking. Wash the turntable tray in warm sudsy water or in the dishwasher.
- Clean the outside surface of the microwave with soap and a clean damp cloth. Dry with a clean soft cloth. To prevent damage to the operating parts of the oven, do not let water seep into any vents or openings.

- Wash the oven door window with very mild soap and water. Be sure to use a soft clean cloth to avoid scratching.
- If steam accumulates inside or outside the oven door, wipe with a soft cloth. Steam can accumulate when operating the oven in high humidity and in no way indicates microwave leakage.
- Never operate the oven without food in the oven cavity; this can damage the magnetron tube or glass tray. You may wish to leave a cup of water standing inside the oven when it is not in use to prevent damage if the oven is accidentally turned on.

## Before You Call

Solutions to Common Problems



### Troubleshooting guide

If you have a problem you cannot solve, please do not hesitate to call our service line:

**Questions or for Service Call:**

**1-866-312-2117**

Before you call a repair person for your microwave, check the list below for possible easy solutions to some common problems.

#### Neither the microwave's display or oven operates -

- Properly insert the plug into a grounded power outlet.
- If the outlet is controlled by a wall switch, make sure the wall switch is turned on.
- Remove the plug from the outlet, wait 10 seconds, then plug the microwave in again.
- Reset the household circuit breaker or replace any blown fuses.
- Plug a different appliance into the power outlet. If the other appliance will not operate, have a qualified electrician repair the outlet.
- Plug the microwave into a different power outlet.

#### The oven display works, but the oven will not operate -

- Make sure the oven door is closed securely and completely.
- Check to see if packing material or other materials are stuck to the door seal.
- Check for damage to the oven door.
- Press the STOP/clear pad twice and attempt to re-enter cooking instructions
- Plug a different appliance into the power outlet. If the other appliance will not operate, have a qualified electrician repair the outlet.
- Plug the microwave into a different power outlet.

#### The power goes off before the cook time has elapsed -

- If there has been a power interruption, remove the plug from the outlet; wait 10 seconds, then plug the microwave in again. If there was a power outage, the time indicator in the display will show **00:00**.
- Reset the clock and any cooking instructions.
- Reset the household circuit breaker or replace any blown fuses.
- Press the STOP/clear pad twice and attempt to re-enter cooking instructions.
- Plug a different appliance into the power outlet. If the other appliance will not operate, have a qualified electrician repair the outlet.
- Plug the microwave into a different power outlet.

#### Food is cooking too slowly -

- Make sure the oven is on a separate 20 amp circuit line. Operating another appliance on the same circuit can cause a voltage drop. If necessary, move the microwave to its own circuit.

#### You see sparks or arcing -

- Remove any metallic utensils, cookware or metal ties from the oven cavity. If using aluminum foil, use only narrow strips and allow at least one inch between the foil and the interior oven walls.

#### The turntable makes noises or sticks -

- Clean the turntable, roller ring and oven cavity bottom.
- Make sure the turntable and roller ring are positioned correctly.

#### Using your microwave causes TV or radio interference -

- This is similar to the interference caused by other small appliances, such as hair dryers. Move your microwave further away from other appliances, like your TV or radio.

**Please note : If the oven is set to cook for more than 25 minutes at 100% power level, it will automatically adjust itself to a 70% power level after 25 minutes to avoid overcooking.**



## Compact Appliance Warranty Information

Your appliance is covered by a **one year limited warranty**. For one year from your original date of purchase, Electrolux will pay costs, except as set forth below, associated with replacing any parts of this appliance that prove to be defective in materials or workmanship when such appliance is installed, used, and maintained in accordance with the provided instructions.

**Exclusions**      **This warranty does not cover the following:**

1. Products with original serial numbers that have been removed, altered or cannot be readily determined.
2. Product that has been transferred from its original owner to another party or removed outside the USA or Canada.
3. Rust on the interior or exterior of the unit.
4. Products purchased "as-is" are not covered by this warranty.
5. Food loss due to any refrigerator or freezer failures.
6. Products used in a commercial setting.
7. Service calls which do not involve malfunction or defects in materials or workmanship, or for appliances not in ordinary household use or used other than in accordance with the provided instructions.
8. Service calls to correct the installation of your appliance or to instruct you how to use your appliance.
9. Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the appliance when it is shipped from the factory.
10. Service calls to repair or replace appliance light bulbs, air filters, water filters, other consumables, or knobs, handles, or other cosmetic parts.
11. Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska.
12. Damages to the finish of appliance or home incurred during installation, including but not limited to floors, cabinets, walls, etc.
13. Damages caused by: services performed by unauthorized service companies; use of parts other than genuine Electrolux parts or parts obtained from persons other than authorized service companies; or external causes such as abuse, misuse, inadequate power supply, accidents, fires, or acts of God.
14. Labor costs after ninety (90) days from your original date of purchase incurred for product repair or replacement as provided herein for carry-in appliances.

**DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES**

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

**If You Need Service**      Keep your receipt, delivery slip, or some other appropriate payment record to establish the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. Service under this warranty must be obtained by contacting Electrolux at the addresses or phone numbers below.

This warranty only applies in the USA and Canada. In the USA, your appliance is warranted by Electrolux Major Appliances North America, a division of Electrolux Home Products, Inc. In Canada, your appliance is warranted by Electrolux Canada Corp. Electrolux authorizes no person to change or add to any obligations under this warranty. Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. Product features or specifications as described or illustrated are subject to change without notice.

**USA**  
**1.866.312.2117**  
Electrolux Major Appliances  
North America  
P.O. Box 212378  
Augusta, GA 30907



**Canada**  
**1.800.668.4606**  
Electrolux Canada Corp.  
5855 Terry Fox Way  
Mississauga, Ontario, Canada  
LSV 3E4